

POURED IN PLACE SAFETY SURFACING


VINYL COATED CHAIN LINK FENCE

SHRUB PLANTING

SCALE:1" = 1'-0"


SCALE: NONE

SCALE: $1 \frac{1}{2} = 1'-0"$

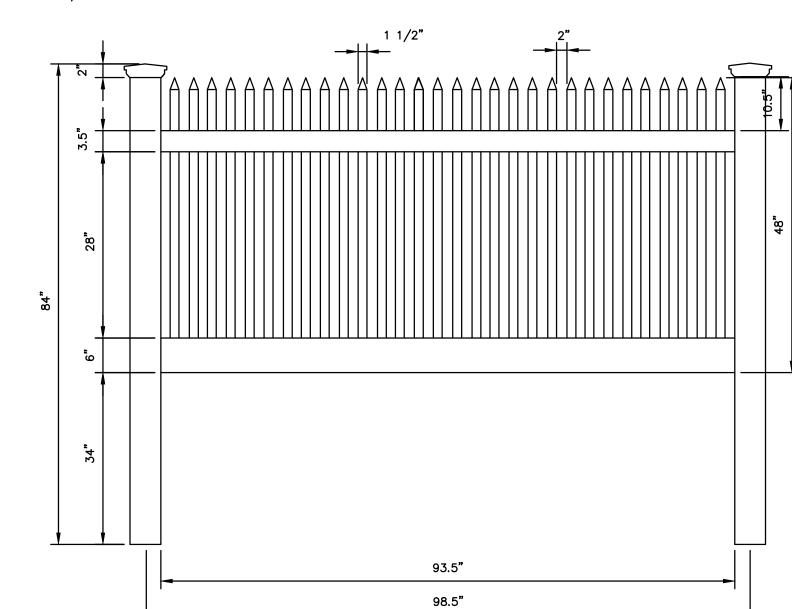

LOOSE OR CRACKED ROOT BALLS ARE UNACCEPTABLE. 2. EXCAVATE TO REQUIRED DEPTH AND DO NOT EXCAVATE BELOW ROOT BALL DEPTH.

3. SET SHRUBS PLUMB WITH ROOT FLARE 1" ABOVE FINISHED GRADE, BACKFILL WITH PLANTING MIX. FLOOD WATERING SAUCER TWICE IN FIRST 24 HOURS AFTER PLANTING. 5. RAISE AND REPLANT ANY SHRUBS THAT SETTLE AFTER PLANTING & WATERING. 6. REMOVE 1/3 BURLAP PRIOR TO BACKFILL. SYNTHETIC BURLAP UNACCEPTABLE 7. 2" DEPTH MULCH (KEEP MULCH 1" AWAY FROM SHRUB BASE) 3" HIGH EARTH WATERING SAUCER 1'-0" BEYOND ROOT BALL PLANTING MIXTURE. 8. FOR CONTAINERIZED PLANTS: REMOVE CONTAINER PRIOR TO PLANTING, SCARIFY ROOT BALL BELOW EDGE 1/2" DEEP IN FOUR LOCATIONS.

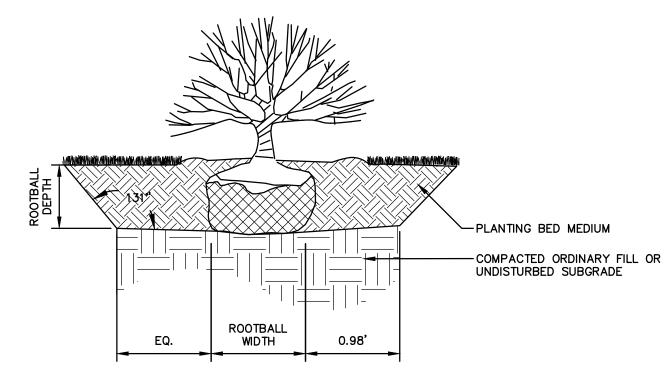

GROUNDCOVER PLANTING

SCALE: NONE

4' VINYL PICKET FENCE
SCALE: NONE

REVISIONS: 1. 10-16-13 Response to Comments

Educational
Storrs Center Storrs, Connecticut

SCALE: AS NOTED DATE: 26, SEPTEMBER 2013


KENYON &CUTLER A R C H I T E C T S

ONE DARLING DRIVE AVON, CONNECTICUT 06001 (060) 677-7998 (060) 674-8824 FAX

SHEET NAME **DETAILS**



180 Glastonbury Boulevard
Suite 103
Clastonbury Connecticut, 00022 Glastonbury, Connecticut 06033 860 652 8227

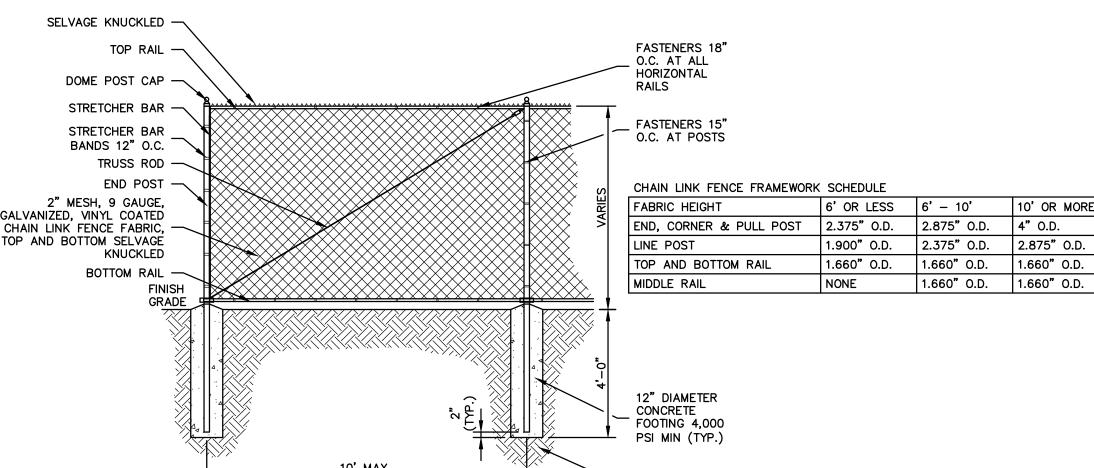

PLANT AT SAME DEPTH-- 1" DEPTH SHREDDED (AFTER SETTLEMENT) AS HARDWOOD MULCH GROWN IN NURSERY REMOVE FROM CONTAINER AND LOOSEN ROOTS BY PLANTING BED PLANTING — - SCARIFY/LOOSEN SOIL MEDIUM TOP 3" OF SUBGRADE/FILL PRIOR SPACING AS TO SPREADING OF
PLANTING BED MEDIUM COMPACTED FILL OR -INDICATED UNDISTURBED SUBGRADE IN PLANT SCHEDULE